

Soft Serve “Frosty” Machine



Operating

- (1) Plug unit directly into outlet. Do not use an extension cord! Must be the only unit running on a circuit. Using a different outlet does not ensure it is a different circuit.
- (2) Allow at least 6” of free space all around unit. Do not obstruct air flow!
- (3) Before filling, make sure the barrel is locked down or the unit will leak severely.
- (4) Dry Mix Instructions:
 - In a large container, mix 1 bag of mix into bucket.
 - Add 1 quart of water, Stir.
 - Add a second quart of water, Stir.
 - Pour 2nd bag of mix into bucket.
 - Add 1 quart of water, Stir.
 - Add a second quart of water, Stir.
 - By mixing this way, the final product will be less grainy.
 - Pour until mix reaches MAX FILL LINE.
 - Do not fill above MAX FILL LINE!
 - Position lid correctly on bowl – machine will not run if out of position.
 - Turn on green power button located on the side of the machine
 - Switch up to SNOWFLAKE; Switch up to ICECREAM.
- (5) Allow product to freeze for about 1.5 to 2 before serving.
- (6) Periodically check the machine and insure product is not over freezing as this will cause the auger to seize and the motor will burn.
- (7) To Adjust Consistency:
 - Arrow pointing up: Greater (Thicker consistency)
 - Arrow pointing down: Lesser (Thinner consistency)
- (8) To Dispense Product:
 - Push black button located on front before each serving.
 - Pull handle to dispense.
- (9) Troubleshooting:
 - Problem: The display shows A3 and machine stops.
Cause: Product is too chilled.
Remedy: Turn off machine; allow product to warm. Turn on machine; check consistency. Use arrows to adjust.
 - Problem: The display shows A4 and machine stops.
Cause: The lid is not on properly.
Remedy: Reposition lid.

Cleaning

- (1) While machine is on, change SNOWFLAKE to ZERO to stop refrigeration system.
- (2) Drain excess product from bowl.
- (3) Turn power off.
- (4) Fill bowl with warm water to MAX LEVEL.
- (5) Turn power back on and drain water from bowl.
- (6) Turn power off and repeat if necessary.
- (7) With sponge, wipe inside of bowl.
Do not remove bowl or handle under any circumstances!